

EARTH FAULT RELAY

EFR-9611



FEATURES

- Earth Fault Current Monitoring In 1 ϕ - 2W, 3 ϕ -3W And 3 ϕ -4W System
- Test Mode Available.
- Tripping Reset Facility.
- Test/Trip Reset Via Front Key

TECHNICAL SPECIFICATION

INPUT SPECIFICATION

Input Current	5 Amp. AC From CBCT OR CT
Range	10.0 % to 100.0%
Resolution	1 %

DISPLAY & KEYS

Display	4 Digit Seven Segment 0.56" Red
Keys	SET, INC, DEC, ENT/RST

DIMENSION

Size (mm)	96(H) X 96(W) X 52(D)
Panel Cutout	92(H) X 92(W)

OUTPUT SPECIFICATION

Relay	1 Nos.
Relay Type	1 C/O (NO-C-NC)
Rating	10A, 230V AC Resistive Load

AUXILIARY SUPPLY

Supply Voltage	100 To 250 V AC, 50/60Hz
Power Consumption (VA Rating)	4VA @ 230 VAC MAX

ENVIRONMENT CONDITION:

Operating Temp.	0 °C to 55 °C
Relative Humidity	UP to 95% RH(non-condensing)
Protection Level (As per request)	IP-65 (Front side) As per IS/IEC 60529 : 2001


MECHANICAL INSTALLATION

Outline Dimension (mm)	Panel cutout


TERMINAL CONNECTION

20	19	18	17	16	15	14	13	12	11
CBCT/CT					EFR-9611				

Supply			Relay						
100V to 250VAC			NO	C	NC				
L	N								
1	2	3	4	5	6	7	8	9	10

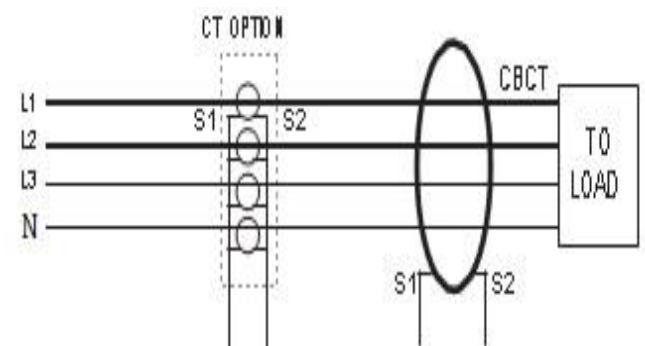

PARAMETER SETTING

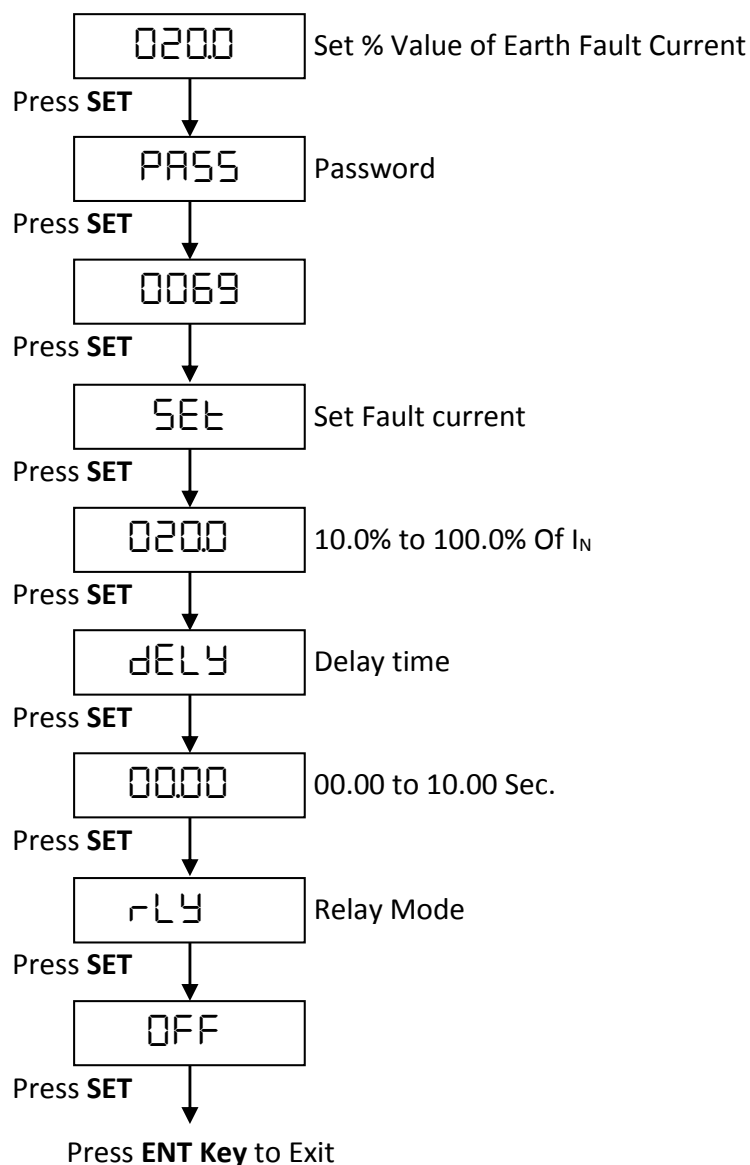

Note: Restart Instrument after changing Relay Mode.

TEST MODE

To Enter in TEST Mode

- Press TEST Key 5 Second

Display Shows

TEST

Where Relay is ON

- To Exit TEST mode Press ENT/RST Key

TRINITY ENERGY SYSTEMS PVT LTD

Email: sales@trinityenergy.co.in
Web: www.trinityenergy.co.in

* Specifications are subject to change without notice due to continuous improvement.

TRINITY

